

DISASSEMBLY PROCEDURE FOR PIONEER W4500NEX, Z9100DAB, Z9100BT, Z9150BT, Z9200DAB, Z9200BT, Z9250BT

While the pictures shown are slightly different from the model in shape, the disassembly procedure is the same

Opening the Monitor manually –

Method for opening the flap manually –

1. Insert a tip of screwdriver with diameter approximately 2mm into the slit at the bottom side of the unit and slide the part to the direction indicated by an arrow. The front panel will open slightly (about 1cm) that's enough, proceed to step 2.




2. Pull out the Detach Monitor Assy in the direction indicated by an arrow



3. Remove the screws from both sides (one on each side)




4. Release the eight latches and then pull the plastic Panel

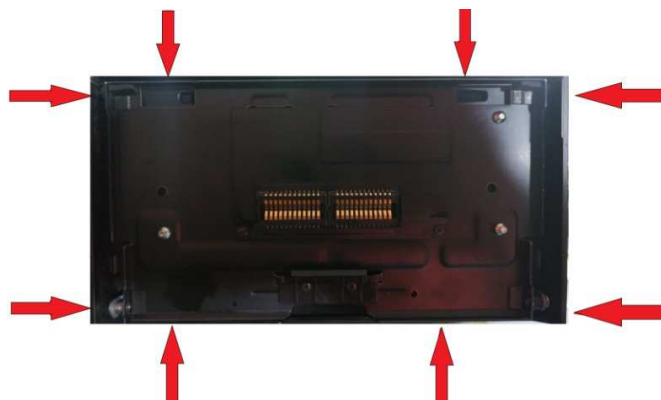


5. Pull the plastic Panel forward, gently lifting the top of the Detach Monitor.

Be careful not to damage or disconnect the front panel cable!

For those successfully disconnected the front panel cable – write me an email for explanation how to disassembly and remove the dvd part and to connect front panel cable to the main board.

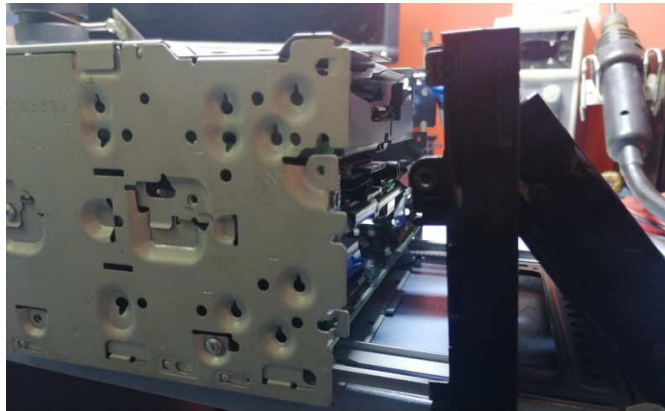

6. Remove your original SOFTWARE CARD from the unit and replace it with the SOFTWARE ERROR FIX CARD you received. Take attention - the Software card is in the lower slot! Upper slot is for Media card!

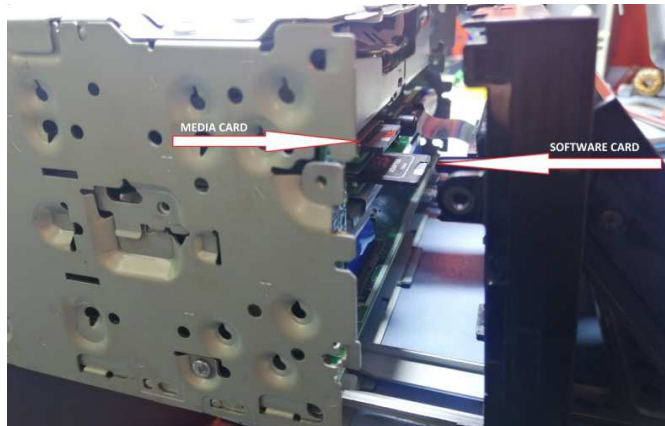

7. Assembly all in back order
8. Connect the unit and enjoy!